

# First choice for professionals!

## Static plate load tester

### HMP PDG<sup>pro</sup> acc. ASTM D1194/1195/1196, DIN 18134

**NEW**

Measurement 4  
10.05.2012 14:09  
10.05.2012 14:26

EV1= 48.88 MPa  
EV2=112.63 MPa  
EV2/EV1= 2.30

print

**3,5" Display**

**GPS**

HMP PDG<sup>pro</sup>



**USB**

**Printer**



Magdeburger Prüfgerätebau GmbH  
Service: +49(0)391 2514866  
www.hmp-online.com

#### NEW:


- state of the art technology, reliable, precise, handy
- extra large 3.5" display, nondazzling, illuminated
- intuitive menu navigation
- DataSecure - error free automatic interpretation
- Readout of the settlement curve on the display
- GPS for accurate localization of the measuring point
- USB interface for comfortable data transfer
- Software for creation of professional test protocols
- highest flexibility due to modular design

*Easy retrofitting  
for all static plate load testers!*




Building calls for testing!

# HMP PDGpro - smart, precise, reliable

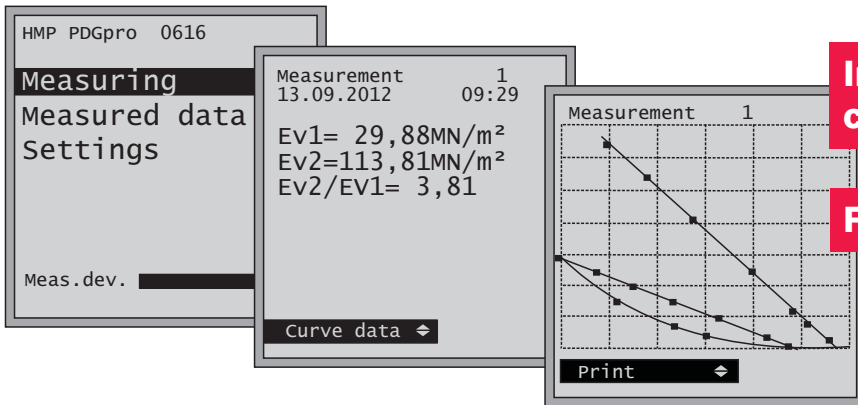

**Intuitive menu navigation:  
choose > confirm > ready!**

**Readout of the settlement curves**

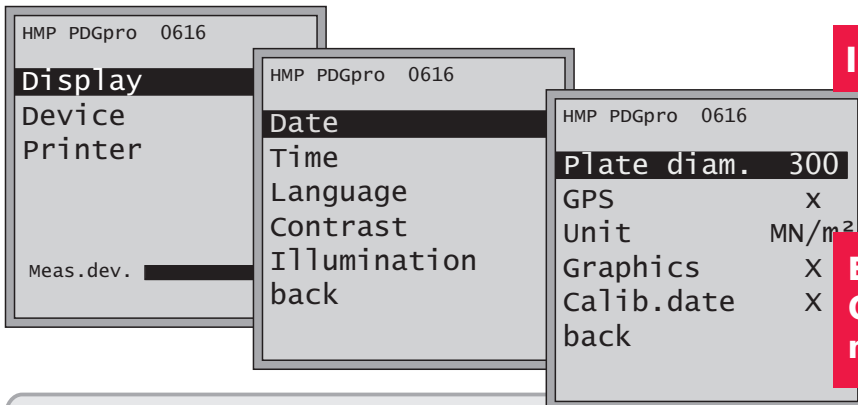

**Individual device settings**

**Everything on a view!  
Clearly arranged display and comfortable  
management of the measured data**

## Highlights:

- excellent readability regardless of the weather conditions
- automatic calculation and readout of Ev1, Ev2, Ev1/Ev2 and settlement curve
- USB, GPS, easy handling
- comfortable data back-up
- according to newest standards (ASTM, DIN)
- animation and video online available

## Certain as usual:

- certified German production according DIN EN ISO 9001:2008
- robust and splash proof
- 2 years of HMP-guarantee, inclusive
- competent all-round service
- calibration service



**Effortless data transfer by USB**

**Creating professional test reports  
with evaluation software ProPlat**

No.	Date	Time	Ev2
1	12.03./	09:29	70
2	13.03./	09:40	67
3	14.03./	10.24	113
4	16.03./	08:34	112
5	17.03./	08:52	97
6	18.03./	12:54	81
7	20.03./	13:07	86
8	22.03./	13:14	79
9	23.03./	13:21	100
10	25.03./	13:27	56
Page forward/n			
Page back/n			

\*Displayed in original size

Revision 09/2012

■ MADE  
■ IN  
■ GERMANY



**Test it online now!**  
[www.hmp-online.com](http://www.hmp-online.com)

www.geolab.com.pl Tel.: + 48 22 428 13 89  
email:biuro@geolab.com.pl

Calibration  
INSTITUTE  
authorized by the  
Federal Highway  
Research Institute

**HMP**  
Magdeburger Prüfgerätebau GmbH